

## Frenchwood® Patio Door Transom Sash-Set

Rough Opening	2'-1"	2'-7"	2'-9"	3'-1"	3'-3"	4'-0"	5'-0"	5'-4"	6'-0"	6'-4"
	(635)	(787)	(838)	(940)	(991)	(1219)	(1524)	(1626)	(1829)	(1930)
Unit Dimension	2'-0 <sup>1</sup> / <sub>8</sub> "	2'-6 <sup>1</sup> / <sub>8</sub> "	2'-8 <sup>1</sup> / <sub>8</sub> "	3'-0 <sup>1</sup> / <sub>8</sub> "	3'-2 <sup>1</sup> / <sub>8</sub> "	3'-11 <sup>1</sup> / <sub>4</sub> "	4'-11 <sup>1</sup> / <sub>4</sub> "	5'-3 <sup>1</sup> / <sub>4</sub> "	5'-11 <sup>1</sup> / <sub>4</sub> "	6'-3 <sup>1</sup> / <sub>4</sub> "
	(613)	(765)	(816)	(918)	(968)	(1200)	(1505)	(1607)	(1810)	(1911)

FWTD-1-2110	FWTD-1-2710	FWTD-1-2910	FWTD-1-3110	FWTD-1-3310	FWTD-1-4010	FWTD-1-5010	FWTD-1-5410	FWTD-1-6010	FWTD-1-6410
FWTD-1-2114	FWTD-1-2714	FWTD-1-2914	FWTD-1-3114	FWTD-1-3314	FWTD-1-4014	FWTD-1-5014	FWTD-1-5414	FWTD-1-6014	FWTD-1-6414
FWTD-1-2118	FWTD-1-2718	FWTD-1-2918	FWTD-1-3118	FWTD-1-3318	FWTD-1-4018	FWTD-1-5018	FWTD-1-5418	FWTD-1-6018	FWTD-1-6418
FWTD-1-2120	FWTD-1-2720	FWTD-1-2920	FWTD-1-3120	FWTD-1-3320	FWTD-1-4020	FWTD-1-5020	FWTD-1-5420	FWTD-1-6020	FWTD-1-6420
FWTD-1-2124	FWTD-1-2724	FWTD-1-2924	FWTD-1-3124	FWTD-1-3324	FWTD-1-4024	FWTD-1-5024	FWTD-1-5424	FWTD-1-6024	FWTD-1-6424

## Frenchwood® Patio Door Transom Sash-Set

Rough Opening	7'-0"	7'-11"	8'-0"	8'-11"	9'-6"
	(2134)	(2413)	(2438)	(2718)	(2896)
Unit Dimension	6'-11 <sup>1</sup> / <sub>4</sub> "	7'-10 <sup>1</sup> / <sub>16</sub> "	7'-11 <sup>1</sup> / <sub>4</sub> "	8'-10 <sup>1</sup> / <sub>16</sub> "	9'-4 <sup>1</sup> / <sub>16</sub> "
	(2115)	(2399)	(2419)	(2704)	(2856)

FWTD-1-7010	FWTD-1-7110	FWTD-1-8010	FWTD-1-8110	FWTD-1-9610
FWTD-1-7014	FWTD-1-7114	FWTD-1-8014	FWTD-1-8114	FWTD-1-9614
FWTD-1-7018	FWTD-1-7118	FWTD-1-8018	FWTD-1-8118	FWTD-1-9618
FWTD-1-7020	FWTD-1-7120	FWTD-1-8020	FWTD-1-8120	FWTD-1-9620
FWTD-1-7024	FWTD-1-7124	FWTD-1-8024	FWTD-1-8124	FWTD-1-9624

### Notes:

"Unit Dimension" always refers to outside frame to frame dimension.  
 "Rough Opening" dimensions may need to be increased to allow for use of building wraps, flashing, sill panning, brackets, fasteners or other items.  
 Dimensions in parentheses are in millimeters.

Date: 11/07/16  
 Scale: 1/8" (3) = 1' (305)

## Frenchwood® Patio Door Twin Transom Sash-Set

	4'-0" (1219)	5'-0" (1524)	5'-4" (1626)	6'-0" (1829)	6'-4" (1930)
	3'-11 <sup>1</sup> / <sub>4</sub> " (1200)	4'-11 <sup>1</sup> / <sub>4</sub> " (1505)	5'-3 <sup>3</sup> / <sub>4</sub> " (1607)	5'-11 <sup>1</sup> / <sub>4</sub> " (1810)	6'-3 <sup>3</sup> / <sub>4</sub> " (1911)

1'-0" (305)	1'-4" (406)	1'-8" (508)	2'-0" (610)	2'-4" (711)
1'-3 <sup>3</sup> / <sub>4</sub> " (387)	1'-7 <sup>1</sup> / <sub>4</sub> " (489)	1'-11 <sup>1</sup> / <sub>4</sub> " (591)	2'-3 <sup>3</sup> / <sub>4</sub> " (692)	

**Frenchwood® Patio Door Twin Transom - Sash Set (FWTD-2)**

FWTD-2-4010	FWTD-2-5010	FWTD-2-5410	FWTD-2-6010	FWTD-2-6410
FWTD-2-4014	FWTD-2-5014	FWTD-2-5414	FWTD-2-6014	FWTD-2-6414
FWTD-2-4018	FWTD-2-5018	FWTD-2-5418	FWTD-2-6018	FWTD-2-6418
FWTD-2-4020	FWTD-2-5020	FWTD-2-5420	FWTD-2-6020	FWTD-2-6420
FWTD-2-4024	FWTD-2-5024	FWTD-2-5424	FWTD-2-6024	FWTD-2-6424

## Frenchwood® Patio Door Triple Transom Sash-Set

	7'-11" (2413)	8'-11" (2718)	9'-6" (2896)
	7'-10 <sup>7</sup> / <sub>16</sub> " (2399)	8'-10 <sup>7</sup> / <sub>16</sub> " (2704)	9'-4 <sup>7</sup> / <sub>16</sub> " (2856)

1'-0" (305)	1'-4" (406)	1'-8" (508)	2'-0" (610)	2'-4" (711)
1'-3 <sup>3</sup> / <sub>4</sub> " (387)	1'-7 <sup>1</sup> / <sub>4</sub> " (489)	1'-11 <sup>1</sup> / <sub>4</sub> " (591)	2'-3 <sup>3</sup> / <sub>4</sub> " (692)	

**Frenchwood® Patio Door Triple Transom - Sash Set (FWTD-3)**

FWTD-3-71110	FWTD-3-81110	FWTD-3-9610
FWTD-3-71114	FWTD-3-81114	FWTD-3-9614
FWTD-3-71118	FWTD-3-81118	FWTD-3-9618
FWTD-3-71120	FWTD-3-81120	FWTD-3-9620
FWTD-3-71124	FWTD-3-81124	FWTD-3-9624


### Notes:

"Unit Dimension" always refers to outside frame to frame dimension.  
 "Rough Opening" dimensions may need to be increased to allow for use of building wraps, flashing, sill panning, brackets, fasteners or other items.  
 Dimensions in parentheses are in millimeters.


Date: 11/07/16  
 Scale: 1/8" (3) = 1' (305)

# A-Series

Frenchwood® Patio Door  
Sidelight

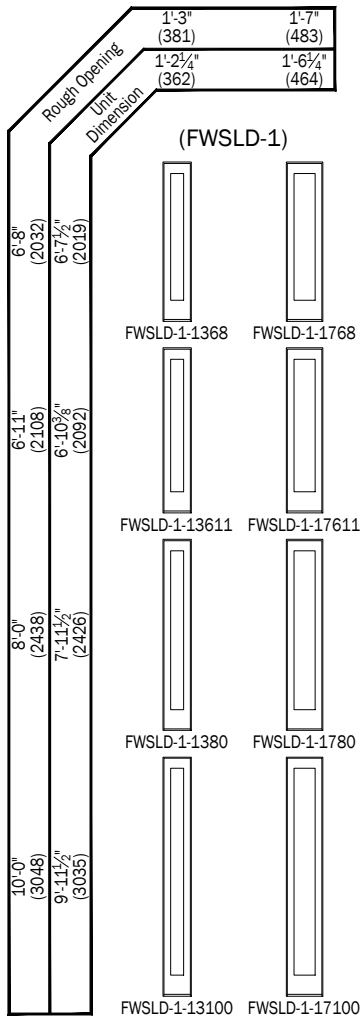


Frenchwood® Patio Door  
Sidelight Transom Sash-Set

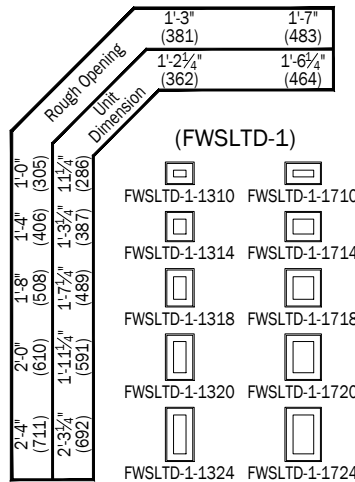


# Andersen® WINDOWS • DOORS

Frenchwood® Patio Door  
Sidelight Transom Direct-Set

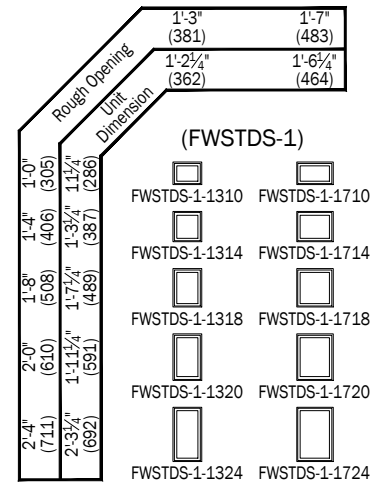

Frenchwood® Patio Door Venting Transom

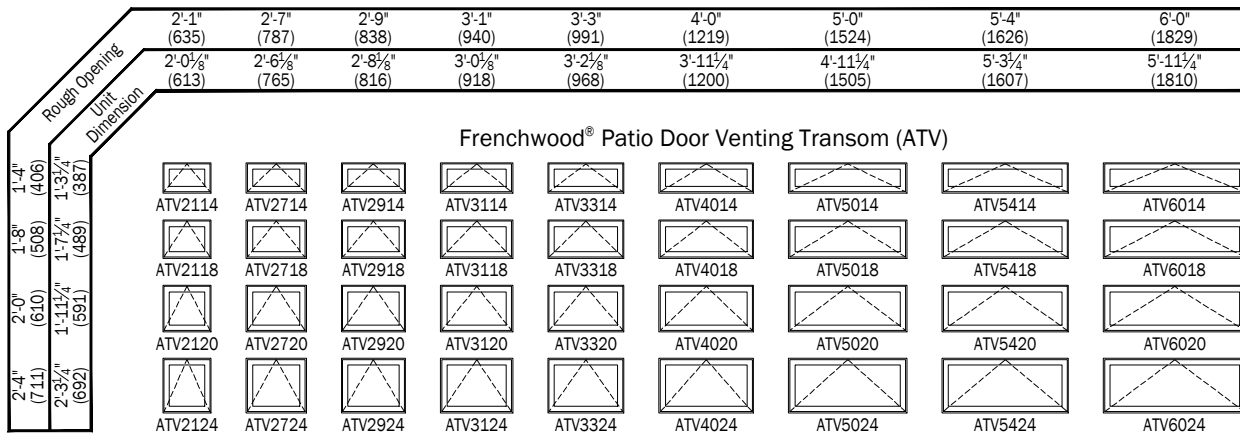

## Notes:

"Unit Dimension" always refers to outside frame to frame dimension.  
 "Rough Opening" dimensions may need to be increased to allow for use of building wraps, flashing, sill panning, brackets, fasteners or other items.  
 Dimensions in parentheses are in millimeters.

Date: 11/07/16  
 Scale: 1/8" (3) = 1' (305)

## Frenchwood® Patio Door Transom Direct-Set

Rough Opening	2'-1"	2'-7"	2'-9"	3'-1"	3'-3"	4'-0"	5'-0"	5'-4"	6'-0"	6'-4"
	(635)	(787)	(838)	(940)	(991)	(1219)	(1524)	(1626)	(1829)	(1930)
Unit Dimension	2'-0 <sup>5</sup> / <sub>8</sub> "	2'-6 <sup>1</sup> / <sub>8</sub> "	2'-8 <sup>3</sup> / <sub>8</sub> "	3'-0 <sup>5</sup> / <sub>8</sub> "	3'-2 <sup>3</sup> / <sub>8</sub> "	3'-11 <sup>1</sup> / <sub>4</sub> "	4'-11 <sup>1</sup> / <sub>4</sub> "	5'-3 <sup>1</sup> / <sub>4</sub> "	5'-11 <sup>1</sup> / <sub>4</sub> "	6'-3 <sup>1</sup> / <sub>4</sub> "
	(613)	(765)	(816)	(918)	(968)	(1200)	(1505)	(1607)	(1810)	(1911)

FWTDS2110	FWTDS2710	FWTDS2910	FWTDS3110	FWTDS3310	FWTDS4010	FWTDS5010	FWTDS5410	FWTDS6010	FWTDS6410
FWTDS2114	FWTDS2714	FWTDS2914	FWTDS3114	FWTDS3314	FWTDS4014	FWTDS5014	FWTDS5414	FWTDS6014	FWTDS6414
FWTDS2118	FWTDS2718	FWTDS2918	FWTDS3118	FWTDS3318	FWTDS4018	FWTDS5018	FWTDS5418	FWTDS6018	FWTDS6418
FWTDS2120	FWTDS2720	FWTDS2920	FWTDS3120	FWTDS3320	FWTDS4020	FWTDS5020	FWTDS5420	FWTDS6020	FWTDS6420
FWTDS2124	FWTDS2724	FWTDS2924	FWTDS3124	FWTDS3324	FWTDS4024	FWTDS5024	FWTDS5424	FWTDS6024	FWTDS6424

## Frenchwood® Patio Door Transom Direct-Set

Rough Opening	7'-0"	7'-11"	8'-0"	8'-11"	9'-6"
	(2134)	(2413)	(2438)	(2718)	(2896)
Unit Dimension	6'-11 <sup>1</sup> / <sub>4</sub> "	7'-10 <sup>1</sup> / <sub>16</sub> "	7'-11 <sup>1</sup> / <sub>4</sub> "	8'-10 <sup>1</sup> / <sub>16</sub> "	9'-4 <sup>1</sup> / <sub>16</sub> "
	(2115)	(2399)	(2419)	(2704)	(2856)

FWTDS7010	FWTDS7110	FWTDS8010	FWTDS8110	FWTDS9610
FWTDS7014	FWTDS7114	FWTDS8014	FWTDS8114	FWTDS9614
FWTDS7018	FWTDS7118	FWTDS8018	FWTDS8118	FWTDS9618
FWTDS7020	FWTDS71120	FWTDS8020	FWTDS81120	FWTDS9620
FWTDS7024	FWTDS71124	FWTDS8024	FWTDS81124	FWTDS9624

### Notes:

"Unit Dimension" always refers to outside frame to frame dimension.  
 "Rough Opening" dimensions may need to be increased to allow for use of building wraps, flashing, sill panning, brackets, fasteners or other items.  
 Dimensions in parentheses are in millimeters.

Date: 11/07/16  
 Scale: 1/8" (3) = 1' (305)