


Big Doors

MultiGlide™ - Traditional Clad - Exterior Stacking Door No Screen/Screen/Multi Screen




4 11/16" Bottom Rail On-Floor Drainage Sill Elevations

(When changing rough opening width - adjust each panel and the pocket by the same amount.)

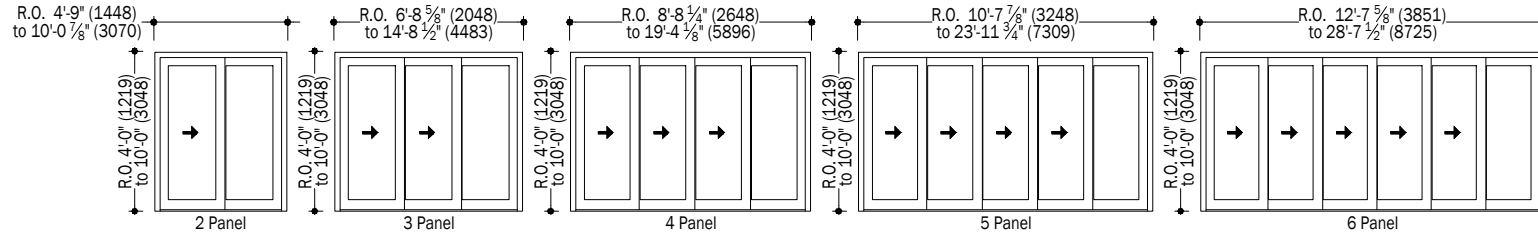

4 11/16" Bottom Rail Flush Sill Elevations

(When changing rough opening width - adjust each panel and the pocket by the same amount.)

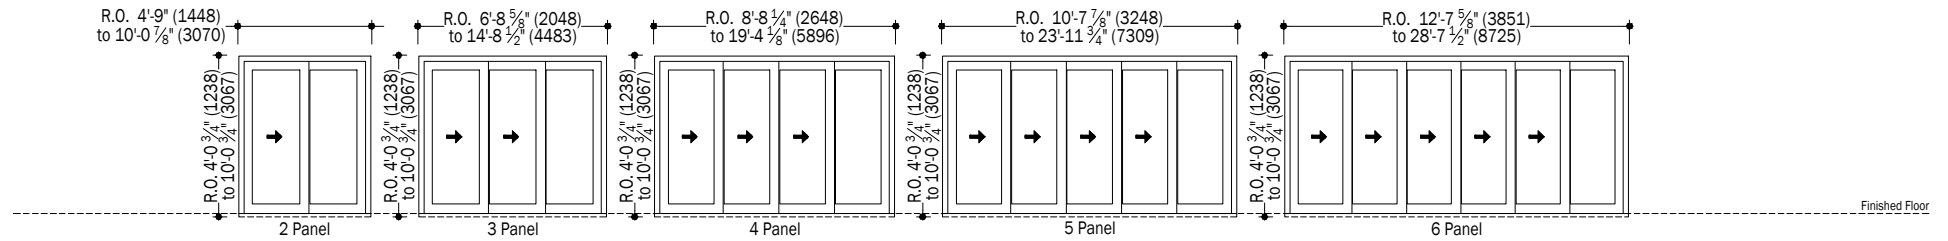

Notes:

Dimensions in parentheses are in millimeters.
Overall sizes can be adjusted in 1/8" (3) increments.

Date: 07/22/19
Scale: 1/8" (3) = 1' (305)


Big Doors

MultiGlide™ - Traditional Clad - Exterior Stacking Door
No Screen/Screen/Multi Screen




8" Bottom Rail On-Floor Drainage Sill Elevations

(When changing rough opening width - adjust each panel and the pocket by the same amount.)

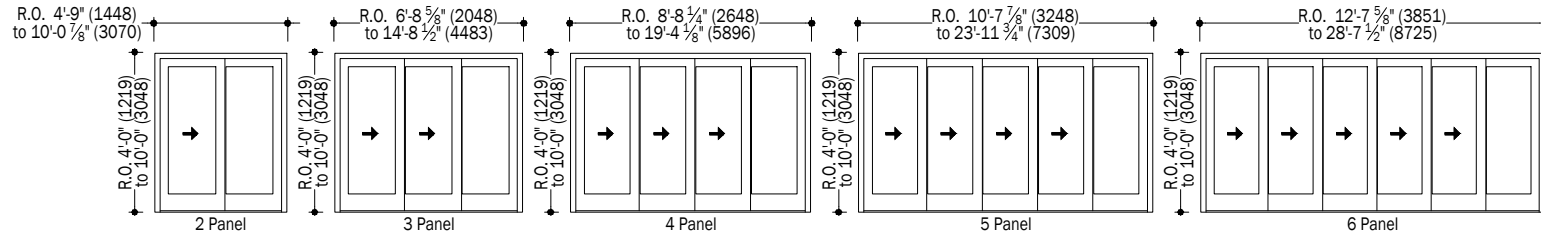

8" Bottom Rail Flush Sill Elevations

(When changing rough opening width - adjust each panel and the pocket by the same amount.)

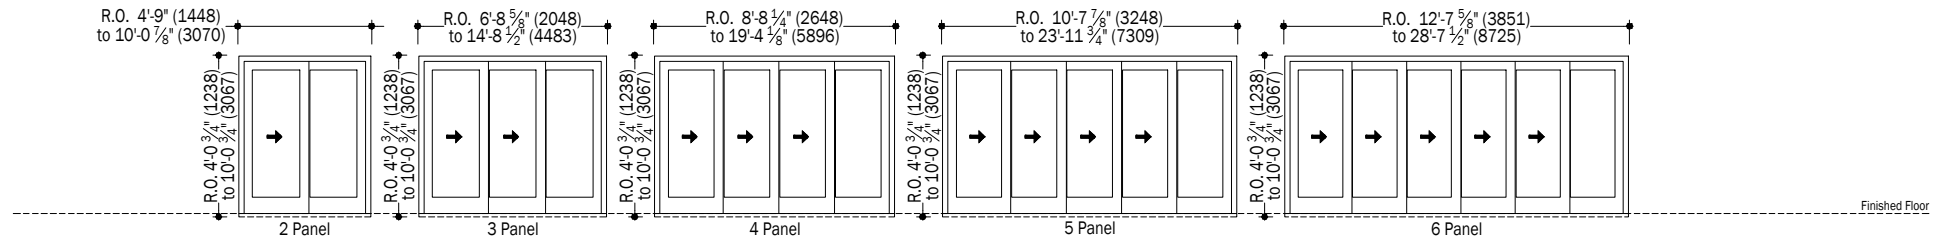

Notes:

Dimensions in parentheses are in millimeters.
Overall sizes can be adjusted in 1/8" (3) increments.

Date: 07/22/19
Scale: 1/8" (3) = 1' (305)

Big Doors


MultiGlide™ - Traditional Clad - Exterior Stacking Door
No Screen/Screen/Multi Screen



12" Bottom Rail

On-Floor Drainage Sill Elevations


(When changing rough opening width - adjust each panel and the pocket by the same amount.)

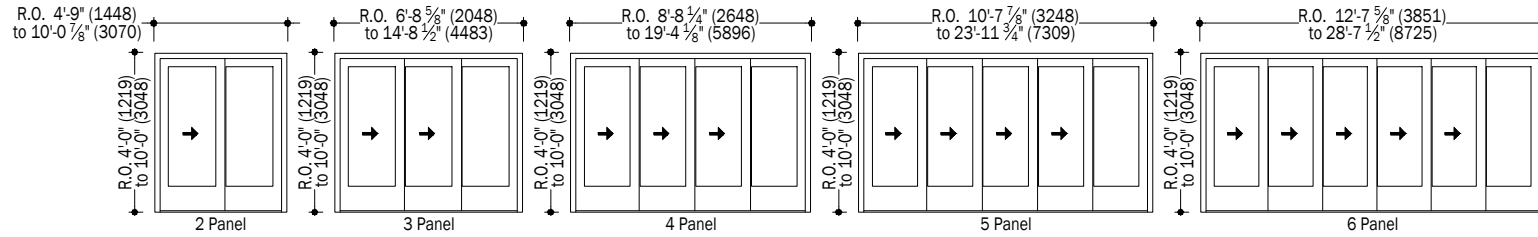

12" Bottom Rail

Flush Sill Elevations

(When changing rough opening width - adjust each panel and the pocket by the same amount.)

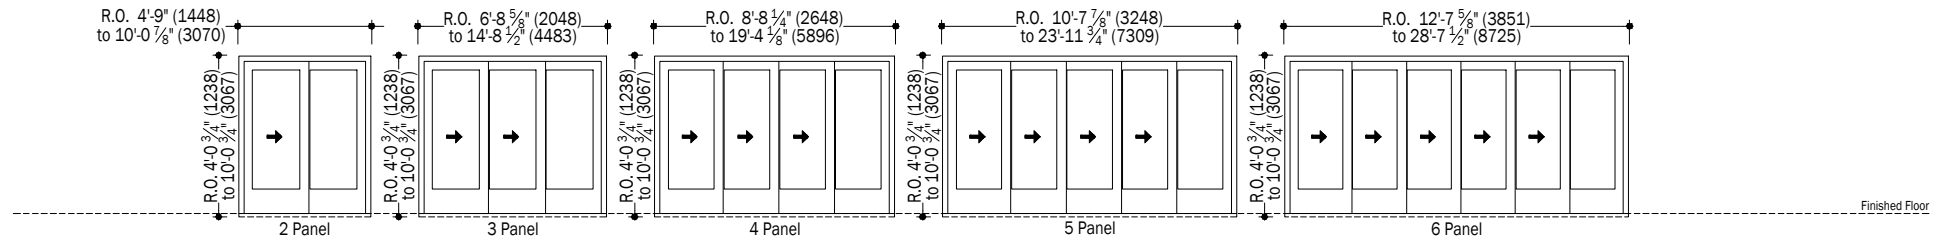

Notes:

Dimensions in parentheses are in millimeters.

Overall sizes can be adjusted in 1/8" (3) increments.

Date: 07/22/19
Scale: 1/8" (3) = 1' (305)