


# Big Doors

## MultiGlide™ - Contemporary Clad - Pocket Door No Screen/Screen/Multi Screen



### On-Floor Drainage Sill Elevations

(When changing rough opening width - adjust each panel and the pocket by the same amount.)

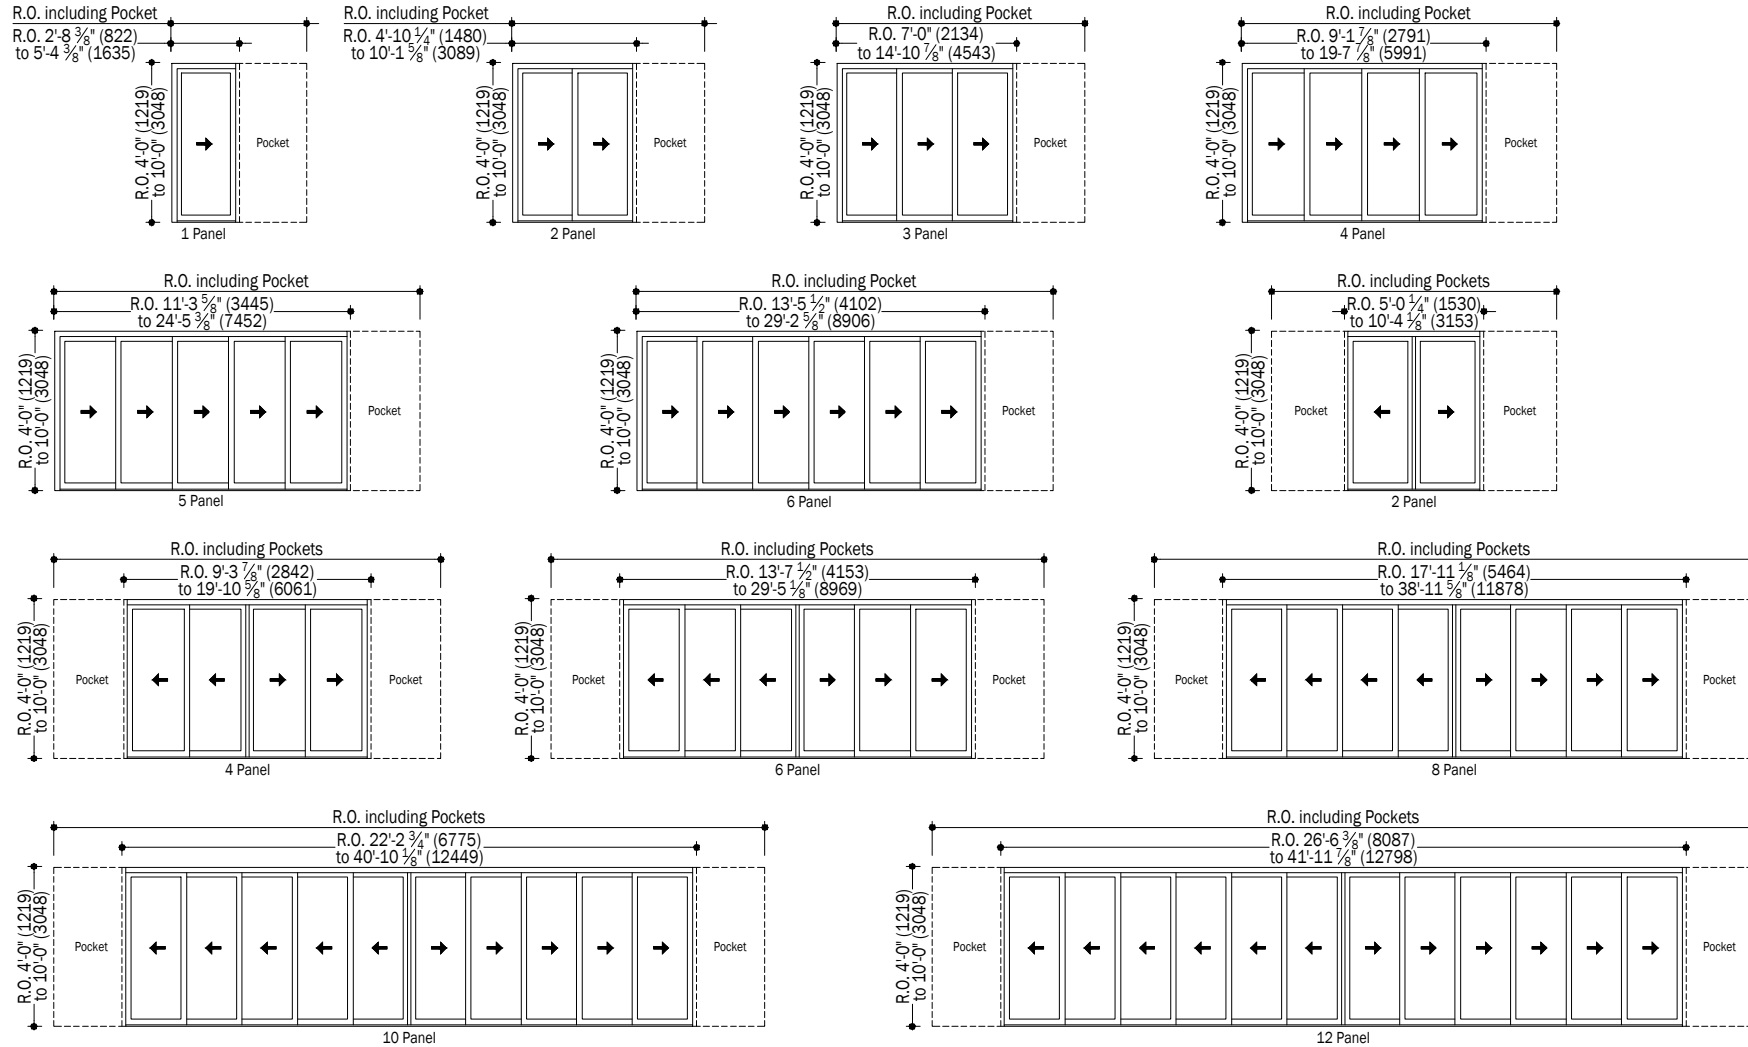

### Notes:

Dimensions in parentheses are in millimeters.  
Overall sizes can be adjusted in 1/8" (3) increments.


# Big Doors

## MultiGlide™ - Contemporary Clad - Pocket Door No Screen/Screen/Multi Screen



### Flush Sill Elevations

(When changing rough opening width - adjust each panel and the pocket by the same amount.)

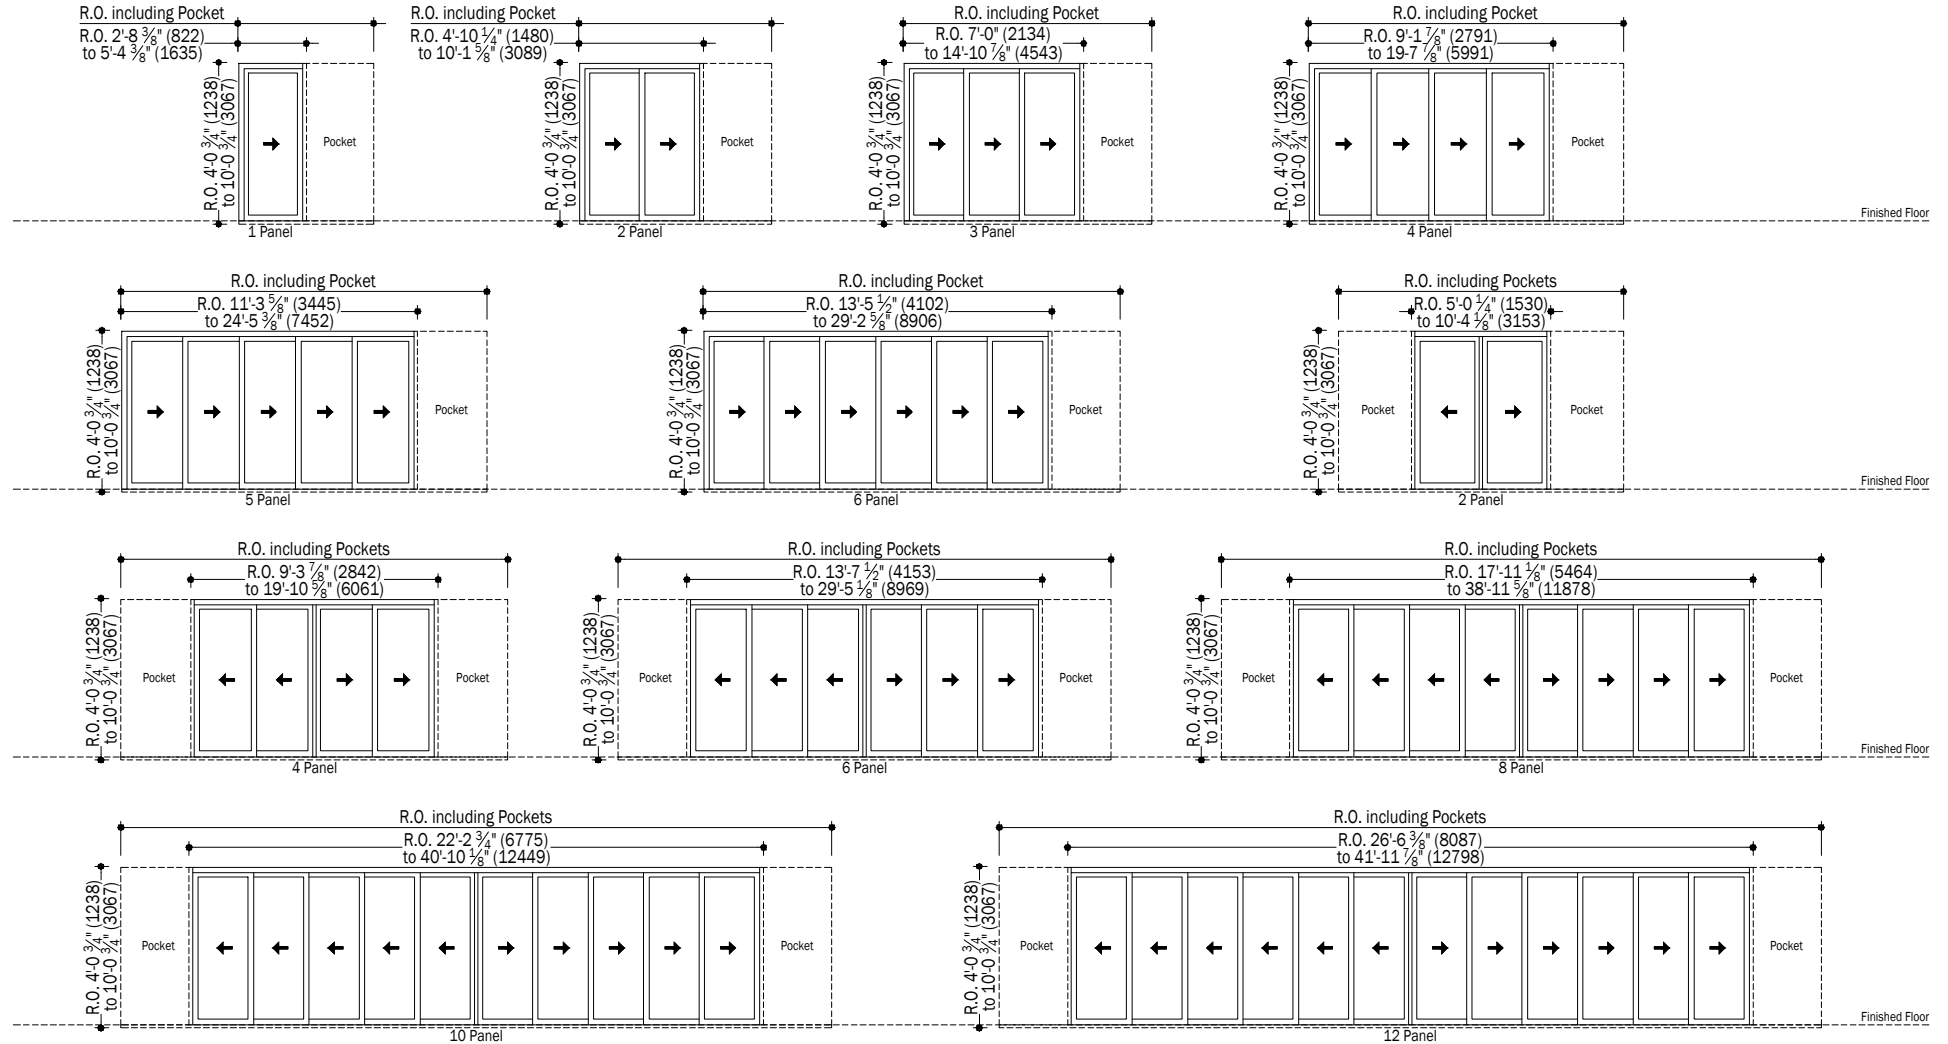

### Notes:

Dimensions in parentheses are in millimeters.

Overall sizes can be adjusted in 1/8" (3) increments.