

STORM DOOR MEASUREMENT GUIDE



1 CHECK TO ENSURE DOOR OPENING AND TRIM ALLOW ENOUGH SPACE FOR A STORM DOOR

DIMENSION A: Minimum 3/4" width flat trim surface required

DIMENSION B: Minimum 1" trim (brickmould) depth required

DIMENSION C: Minimum of 2 1/2" door frame (jamb) depth required*

* Depending on the depth and location of your entry door handle set, additional clearance may be needed.

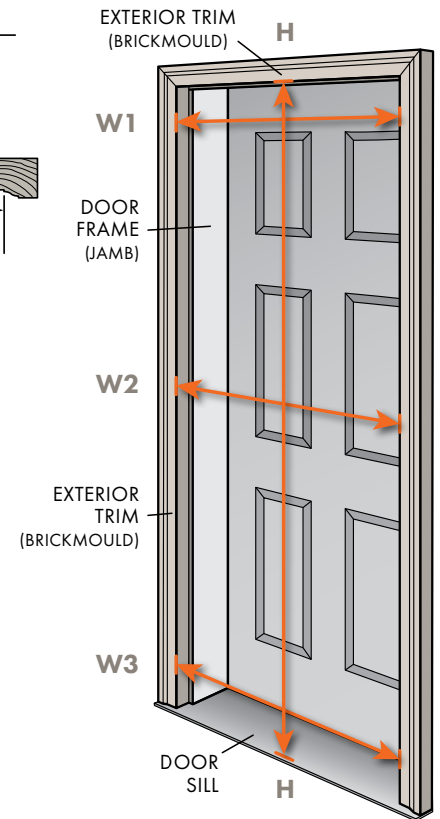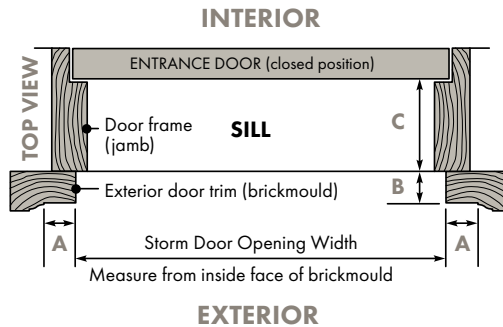

2 MEASURE DOOR OPENING IN ORDER TO DETERMINE THE SIZE STORM DOOR YOU NEED

Measure the width of the door opening at the inside face of exterior trim on each side at top, center & bottom and record the shortest measurement.

(see measure points W1, W2 & W3 in the illustration)

RECORD YOUR SHORTEST
WIDTH MEASUREMENT:

W:

Measure for the height from the sill to the under-side of the brickmould at the top

(see measure point H in the illustration)

RECORD YOUR
HEIGHT MEASUREMENT:

H:

3 DETERMINE THE SIZE YOU NEED BASED ON THE DOOR OPENING MEASUREMENTS AND THE STORM DOOR MODEL THAT IS SELECTED

STANDARD DOOR SIZE WIDTH RANGES:	30"	32"	34"	36"	STANDARD DOOR SIZE HEIGHT RANGES:	80"
Andersen 4000 & 3000 Series Storm Doors with 45 Minute Easy Install System	29 7/8" TO 30 3/8"	31 7/8" TO 32 3/8"	33 7/8" TO 34 3/8"	35 7/8" TO 36 3/8"	X	80" TO 80 7/8"
Andersen 2000 & 400 Series and EMCO Storm Doors	29 3/4" TO 30 3/8"	31 3/4" TO 32 3/8"	33 3/4" TO 34 3/8"	35 3/4" TO 36 3/8"	X	80" TO 80 7/8"


If your measurements are outside the standard width or height ranges shown above, you will require a custom size door.**

	CUSTOM	CUSTOM XL		CUSTOM	CUSTOM XL
Andersen Custom Door Opening WIDTHS:	27 7/8" TO 38 3/8"	27 7/8" TO 42"	EMCO Custom Door Opening WIDTHS:	27 3/4" TO 38 3/8"	38 1/2" TO 42"
Andersen Custom Door Opening HEIGHTS:	72" TO 84 7/8"	72" TO 96"	EMCO Custom Door Opening HEIGHTS:	75" TO 84 7/8"	79" TO 91"

** Select storm door models and select options are not available in custom sizes.

4 CHOOSE THE DOOR HANDING THAT WORKS BEST FOR YOUR ENTRYWAY

If you choose an Andersen 4000 or 3000 Series Storm Door with the 45 Minute Easy Install System, handing will need to be specified at the time of purchase.

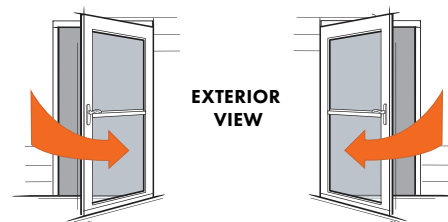

Left Handed (LH)

Right Handed (RH)



For additional measuring and installing tips visit stormdoors.com/measure or scan the QR Code